

B/W CCD Camera CleverDragon series CSCX30BC3 **Operation Manual**

Thank you for purchasing our B/W CCD camera. This operation manual contains many important information such as how to use this product correctly and safely. Please read through this manual carefully. After reading, keep this manual by the side of this product for your future reference.

TOSHIBA TELI CORPORATION

BEFORE USE - GENERAL SAFETY INSTRUCTIONS

Read the following safety precautions carefully before using this product. These instructions contain valuabable infomation on safe and proper use that will prevent harm and damage to the operator and other persons. Make sure that you fully understand the following details (indications, graphic symbols) before proceeding to the remaining sections in this manual

OWNER'S RECORD

Please fill in the blank below the model name and product serial number, which is found on bottom chassis of your device. Keep this number for your record.

Model Name Serial No.

Indication definitions					
Indication	Meaning				
NARNING	This indicates the existence of a hazard that death or catastrophic bodily injury(*1) may result from improper use.				
CAUTION	This indicates the existence of a hazard that bodily injury(*2) or property damage(*3) may result from improper use.				

Notes

- *1 Catastrophic bodily injury means loss of eyesight, burns (high and low temperatured), shock, fracture, poisoning, etc. which leaves a sequela and repuire hospitalization or prolonged treatment
- *2 Bodily injury means injuries, burns and electric shock which does not require hospitalization or prolonged treatment.
- *3 Property damage means extended harm to home, household effects, domesticated animals, and pets.

Graphic symbol definitions

Indication	Meaning
\Diamond	This mark indicates a prohibited action that must not be carried out. The actual prohibited action is indicated in the symbol or nearby graphically or described in text.
	This mark indicates a mandatory action that must not be carried out. The actual instruction is indicated in the symbol or nearby graphically or described in text.

Handling Precautions

	∴ WARNING
	Stop operation immediately when any abnormality or defect occurs. Use during an abnormal condition; such as emitting smoke, burning odors, damage from dropping invasion of foreign objects, etc. may cause fire and/or electric shock. Be always sure to disconnect the connection cable from the camera connector at once and contact your dealer.
3	Do not operate in places with possibility of becoming wet. This may cause fire and/or electric shock.
Θ	Do not repair, disassemble and/or modify by yourself. This may cause fire and/or electric shock. Be always sure to contact your dealer for internal repair, check and cleaning of the product.
0	Don't place things or materials on the unit. Ingress of foreign materials such as metallic things and liquid into the unit may cause a fire or an electric shock.
\bigcirc	Do not put the product in an unstable, slanting and/or vibrated place. Drop and/or fail of the product may cause injury.
Ø	Do not touch the connection cables during a thunderstorm. This might cause electric shock.
0	Use the specified power supply. Use of an unspecified power supply may result in fire or electric shock.
0	Do not be handled roughly, damaged, fabricated, bent forcefully, pulled, twisted, bundled, placed under heavy objects or heated the connection cable.

	Otherwise, fire or electric shock may result.					
	⚠ CAUTION					
0	Note the following instructions when installing. -Do not wrap the product in an inflammable material, such as cloth. -Do not put the product in a narrow space, since the heat generated from the product may be difficult to emanate. If you do not follow the above, the heat generated by the product may cause fire.					
\Diamond	Avoid setting in humid, smoky, vaporized or dusty places. A fire or an electric shock may occur in such places. This may cause fire and/or electric shock.					
\bigcirc	Do not put the product in direct sunshine and/or high temperature. The temperature inside the product may cause fire.					
\bigcirc	Use the specified connection cable. Otherwise, a fire or an electric shock may occur.					
\Diamond	Turn OFF the power in the case of connection. Turn OFF the power in the case of cable. Otherwise, an electric shock or a malfunction may occur.					
\bigcirc	Do not expose its camera head to any intensive light (such as direct sunlight). Otherwise, its inner image pickup device might get damaged.					
	Avoid short-circuiting signal output. Otherwise, a malfunction may occur.					
	Avoid giving a strong shock against the camera body. It might cause a breakdown or damage					

not transmit a shock to the camera connector Ask your dealer to perfom a periodical check and internal cleaning (approx. once every five years). Dust inside the product may cause fire and/or trouble. For check and cleaning cost, please

consult your dealer.

If your camera is used in a system where its camera connector is subjected to strong repetitive shocks, its camera connector is possible to break down. If you intend to use your camera in such a situation, if possible, bundle and fix a camera cable in the place near the camera, and do

DISCLAIMER (LIMITED WARRANTY)

We disclaim any responsibility and shall be held harmless for any damages or losses incurred by the user in any of the following cases:

- Fire, earthquake or any other act of God; acts by third parties; misuse by the user, whether intentional or accidental; use under extreme operating conditions
- · Malfunction or non-function resulting in indirect, additional or consequential damages, including but not limited to loss of expected income and suspension of business activities
- Incorrent use not in compliance with instructions in this instruction specifications and manual.
- Malfunctions resulting from misconnection to other equipment.
- Repairs or modifications made by the user or caused to be made by the user and carried out by an unauthorized third party.
- Notwithstanding the foregoing, Teli's liabilities shall not, in any circumstances, exceed the purchase price of the product.
- About the item which does not have a publication in the specifications and manual of this product, it considers as the outside for a guarantee.

RESTRICTION FOR USE

- Should the equipment be used in the following conditions or environments, give consideration to safelty measures and inform us of such usage:
 - of the equipment in the conditions or environment contrary to those specified, or use 1. Use outdoors
 - 2. Use of the equipment in applications sxpected to cause potential hazard to people or propety, which require special safety measures to be adopted.
- This product can be used under diverse operating conditions. Determination of applicability of equipment or devices concerned shall be determined after analysis or testing as necessary by the designner of such equipment or devices, or personnel related to the specifications. Such designer or personnel shall assure the performance and safety of the equipment or devices.

 This product is not designed or manufactured to be used for control of equipment directly concerned
- with human life (*1) or equipment relating to maintenance of of public services/functions involving factors of safety (*2). Therefore, the product shall not be used for such applications.
 - (*1): Equipment directly concerned with human life refers to.
 - Medical equipment such as life-support systems, equipment for prerating theaters.
 Exhaust control equipment for exhaust gases such as toxic fumes or smoke.

 - Equipment mandatory to be installed by various laws and regulations such as the Fire Act or Building Standard Law
 - Equipment related to the above.
 - (*2): Equipment relating to maintenance of public services/functions involving factors of safety refers to
 - Traffic control systems for air transportations, railways, roads, or marine transportation
 - Equipment for nuclear power generation
 - Equipment related to the above

CAUTIONS ON USE

Carefully handle the units

Do not drop, or give a strong shock or vibration to the camera. This may cause problems. Treat the camera cables carefully to prevent cable problems, such as cable breakdown and loosened connections.

Operating ambient temperature and humidity

Do not use the camera in places where temperature and humidity exceed the specifications. Picture quality will lower and internal parts may be damaged.

Be particularly careful when using in places exposed to direct sunlight. When shooting in hot places, depending on the conditions of the object and the camera (for example when the gain is increased), noise in the form of vertical strips or white dots may occur. This is not a malfunction.

Restriction for the lens combination

This camera might form a ghost to image area depending on the combination of a lens and an illumination with this camera. But this is not a failure of this camera. Therefore, please check the combination of the lens and the illumination with this camera when use

When mounting a lens, take extra caution so that the lens is not tilted, nor does flaw exist at the lens-mount-screw part. Also check to confirm that no dirt nor other foreign object is put inside

Improper mounting might cause the parts to become locked.

Do not shoot under intense light.

Avoid intense light such as spot light on part of the screen because it may cause blooming or smears. If intense light falls on the screen, vertical stripes may appear on the screen, but this is not a malfunction.

Do not expose the camera's image-pickup-plane to sunlight or other intense light directly. Its inner CCD (charge-coupled device) might be damaged.

Moire

When thin stripe patterns are shot, stripe patterns that are not actually there (moire) may appears as interference stripes. This is not a malfunction. Undesirable noise

If the camera or the cables are located near something which emit strong magnetism or near something which emit strong electric wave, undesirable noise may appear on the screen. In such a case, try to change the location of the camera or the cable wiring

Handling of the protection cap

When the camera is not in use, put a lens-cap onto the camera head for protection of the image-pickup-plane

When not using the camera for a longtime.

Stop supplying power for safety.

When cleaning the camera

Always turn off the power and clean with a piece of soft dry cloth.

To remove stubborn stains, use a soft cloth soaked in diluted acid-free detergent. Do not use alcohol, benzine, thinner, etc. If used, coating and printed letters may be discolored.

In case the image-pickup-plane should be settled with fine dust, dirt, or scratched, ask your dealer for technical advice

Wastes of this product should be separated and discarded in compliance with the various national and local ordinances

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be require to correct the interference at

1. PRODUCT DESCRIPTION

CleverDragon series CSCX30BC3 is an integrated type B/W CCD camera with a XGA format all-pixel-data readout CCD. The model is suited for high-speed, high-resolution image processing use. Its compact, light-weight body is ideal for system integration.

2. FEATURES

(1) All-pixel reading

The all-pixel reading system allows the CSCX30BC3 to read all pixels in just 1/30 second. CSCX30BC3 is equipped with a full-frame shutter that allows all-pixel reading even during shutter operations

(2) Full-frame shutter

CSCX30BC3 is equipped with a random trigger shutter, which starts exposure synchronized with external trigger signals. Fast-moving objects can thus be captured in place, which ensures accurate image processing.

(3) Tetragonal lattice layout

The tetragonal lattice layout of CCD pixels facilitates computation for image processing

(4) Camera Link interface (power supply type)
By using a Camera Link-capable frame grabber board to which power can be supplied, high-speed transfer of captured images to a PC as well as various types of camera control from the PC are allowed. Power can also be supplied to the camera with only one cable.

(5) Random trigger shutter function

CSCX30BC3 is equipped with a random trigger shutter, which starts exposure synchronized with external trigger signals. Fast-moving objects can thus be captured in place, which ensures accurate image processing.

(6) Restart-Reset

Images can be shot and fetched at arbitrary timing based on external VD signal input.

(7) Partial scan

Speed is further increased because areas other than the image output range specified by the user are not read (8) Ultra-compact and lightweight main unit

The space-saving ultra-compact and lightweight camera has excellent resistance against vibration and

impact (9) Conformity to RoHS directive CSCX30BC3 is manufactured in compliance with the European RoHS directive which prohibits the

CONFIGURATION (1)Camera body

use of hazardous substances.

(2)Accessory

Operation Manual(Japanese) Operation Manual(English)1

OPTION PARTS

(1)Camera-mounting kit···· ··· Model name : CPT8560

*Contact your dealer / distributor for details of option units.

*Application software is not supplied as a standard item.

INTERFACE

Video output/controlling/power supply connector: (Camera Link Base Configuration) CAMERA LINK Outputs video signals and VALID, based on the camera link standard LVDS.


This connector is connected to the frame grabber board, image processing device and others

And it is possiple to supply the power to the camera, by using an exlusive Camera Link cable and frame grabber board complied with Power over Camera Link standard.

Connector model: HDR-EC26FDTG2+ (Manufactured by Honda Connectors)

Pin #	I/O	Signal name	Pin #	I/O	Signal name
1	-	+12V	14	-	GND
2	0	TxOUT0-	15	0	TxOUT0+
3	0	TxOUT1-	16	0	TxOUT1+
4	0	TxOUT2-	17	0	TxOUT2+
5	0	TxCLK OUT-	18	0	TxCLK OUT+
6	0	TxOUT3-	19	0	TxOUT3+
7	I	SerTC(RxD)+	20	I	SerTC(RxD)-
8	0	SerTFG(TxD)-	21	0	SerTFG(TxD)+
9	I	CC1(TRIG/VD)-	22	I	CC1(TRIG/VD)+
10	I	CC2+	23	Ι	CC2-
11	I	CC3 -	24	Ι	CC3+
12	I	CC4+	25	Ι	CC4 -
13	-	GND	26	-	+12V

CONNECTION EXAMPLES

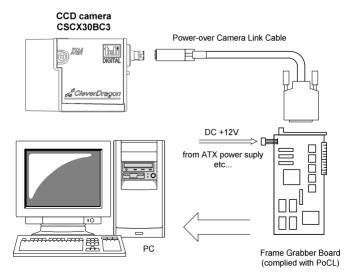

By accessing the camera register published on the camera link I/F, you can control/set each function.

Since access to the camera register is performed via the frame grabber board, the controlling and setting methods differ depending on the frame grabber board you use. For details, refer to the instruction manual of the relevant frame grabber board or contact our sales representative.

This instruction manual describes the specifications in the case where the camera register is directly connected by serial transmission over the camera link interface.

For details of the control and setting of functions, refer to "Interface Specification". Please ask your distributor or a sales representative about "Interface Specification".

7-1 Explanation of Each Function

(1) Readout mode

Readout mode Address: 0x90, Bit: 0, Value: 0 to 1

Video is output from the camera link connector. The output video can be grabbed by the frame grabber board. The frame rate and resolution of output images that this model supports are as follows:

• All pixel read out

• Partial Scan

• Partial Scan

1024 (fixed)


• Partial Scan

Partial Scan Video Start Line: 0 to 576 Partial Scan Video Width: 192 to 768

(1-1) All pixel read out Address: 0x90, Bit: 0, Value: 0

As all pixels are read out in approx. 1/30s, you will get images with the higher V resolution (you have to change the shutter speed to 1/30s or shorter).

Vertical Timing

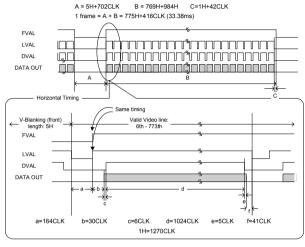

(1-2) Partial Scan Address: 0x90, Bit: 0, Value: 1


(1-2) Partial Scan
Speed is further increased because areas other than the image output range specified by the user are not read. Partial scan setting procedure is following:


• Video start line
• Video output width
• Partial scan update


• Partial scan update

• Address: 0xC4, Bit: 0 to 9, Value: 192 to 768

• Address: 0xC8, Bit: 0, Value: 1

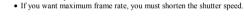

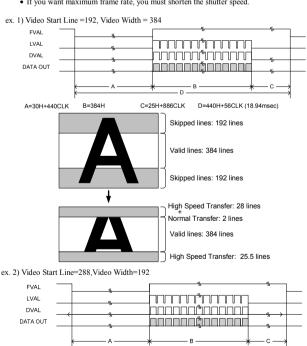

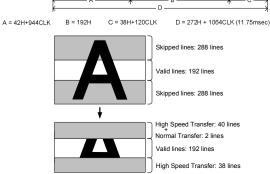

(3) Setup Level

Setup Level <u>Address: 0x70, Bit: 0 to 7, Value: 0 to 255</u>
You can add the offset level to the reference black level.

Setup (calculated value)	Setting Range	Calculation formula	
0 to 255LSB (10bit)	0x00 to 0xFF (0 to 255)	40 + Setup (10bit)	

(4) Gair

Address: 0x76, Bit: 0 to 6, Value:0 to 90

You can set Gain (video gain)

Gain (calculated value)		Setting Range	Calculation formula	
0 to ap	pprox. +12dB	0x00 to 0x5A (0 to 90)	0.132dB × Gain	

Notes on gain setting:

Setting a too high gain value can increase noise. When you adjust the brightness of the shot image, you are responsible for finally confirming the image quality by using the entire machine/equipment.

(5) Electronic shutter

The exposure time has the format (numerator/denominator).

The numerator and denominator can be set separately in respective registers.

1 frame length depends on the shutter speed.

Address: 0xA4, Bit: 0 to 7, Value: 1 to 255 Numerator Denominator Address: 0xA0, Bit: 0 to 10, Value: 1 to 20000

(6) Random trigger shutter


Address: 0x91, Bit: 0, Value:1

In the random trigger shutter mode, you can shoot and grab an image at an arbitrary timing by trigger signal input from the external.

- External trigger signals can be input from the camera link I/F CC1.
- If polarity is set to negative polarity, exposure starts at the falling edge of the trigger. Address: 0x93, Bit: 0, Value:0 is Negative Polarity, Value:1 is Positive Polarity
- Address: 0.535, Bit: 0, value: its regarder rolarity, value: its rolarity of the random trigger shutter of this camera can be operated in two types of mode: fixed mode and pulse width mode. How to determine the exposure time differs depending on the mode.

(6-1) Fixed mode


Address: 0x92, Bit: 0, Value: 0 The exposure time is determined by the setting value for the shutter speed.

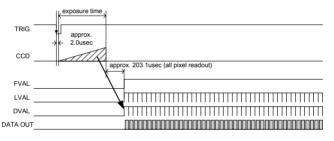

(6-2) Pulse width mode

Address: 0x92, Bit: 0, Value: 1

The exposure time is determined by the pulse width. Set a pulse width of 1H (approximately 43.1 µs) or more.

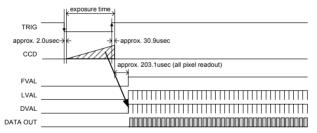


(7) Restart Reset


Restart Reset Address: 0x91, Bit: 0 to 1, Value:2

The restart / reset function is available with the ext.VD signal. You can get an arbitrary slower shutter speed than normal shutter and random trigger shutter

- External VD signals can be input from the camera link I/F CC1.
 If polarity is set to negative polarity, exposure starts at the falling edge of the trigger.
 Address: 0x93, Bit: 0, Value:0 is Negative Polarity, Value:1 is Positive Polarity

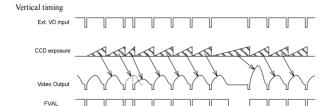

Horizontal timing

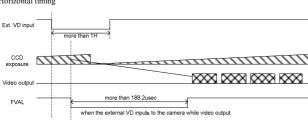

(8) Output bit Address: 0x87, Bit: 0 to 3, Value: 8 or 10

You can set gray scale per pixel. The initial factory setting is 8 (8 bit).

7-2 Command Communication Protocol

The command communication protocol is the teli standard method (method in which parameters are set in the registers in the camera).

In command send/receive operation, hexadecimal address and data are converted to ASCII data.

All ASCII alphabetic characters used are uppercase characters.

(1) Writing to the register

To write data in a register, send a command, as follows. (Address' max-length is 3 bytes, and Data's max-length is 8 bytes)

The camera responds to the write command with No Error (ACK) or Error (NAK), as follows: No Error (ACK):

[ACK] (0x00) (0x00) Error (NAK): [NAK] [CR] (0x15) (0x0D)

(2) Reading the register

To read data from a register, send ', (comma)', 'R', 'Q' and [CR] code following the address. For example, to read data in address 0x91, send a command, as follows:

ctually, the camera responds to the read request as minimum data length: For example, to read data 0x10 to address 0x91, the camera responds as follows:



7-2. Error Status

If NAK is returned to the sent command, you can obtain detailed information on the error by accessing the status register.

Error type	Details of error	Status [0x69]	Expansion Status [0x6A]
No Error	The previous communication was executed normally.	0x00	0x00
Communication Error	A packet format error was detected.		0x01
	An overrun error was detected.		0x02
	A framing error was detected.	0x01	0x03
	The data length of the command is beyond the specified upper limit.		0x04
General Accessing Error	The register you attempted to access does not exit.		0x01
	You attempted a read access to a Write Only Register.	0x02	0x02
	You attempted a write access to a Read Only Register.	0X02	0x03
	The setting value is out of the specified range.		0x04
FlashRom Accessing Error	FlashRom accessing error.	0x03	0x01
User Setting Read Error	You load your saved setting when any saved setting data is not available.	0x04	0x01
Partial Mode Related Error	You change registers related partial scan mode when you select all pixel read-out mode.	0x05	0x01
Shutter Related Error	You attempted to set a shutter speed beyond the specified range.		0x01
	You change Random Trigger shutter mode when you select Normal Shutter mode or Resetart-Reset mode.	0x06	0x02
	You change trigger polarity when you select Normal Shutter mode.		0x03

BEFORE DETERMINING IT AS BEING A FAULT

If any trouble occurs in use, check the following first. If the trouble persists, contact your distributor or our sales representatives.

Phenomena	Check item		
Cannot turn on power	Check the connection of the CameraLink (PoCL) frame grabber board and cable.		
Shooting image is not	Check the connection of the CameraLink (PoCL) frame grabber board and cable.		
displayed	Check that the camera register settings are correct.		
	Check that the dip switch settings are correct.		
	Check that the grabber board is installed and set up correctly.		
Frame drop occurs	If more than one boards are installed in the PCI slots, remove the other boards.		
on shooting image			
Shooting image remains still	Check that the camera is not in the random trigger mode.		
	Check the setting of the grabber board.		
	Check the connection of the camera link cable.		
	Check the setting of the grabber board.		
	Check the connection of the camera link cable.		
Cannot control camera from	Check the connection of the camera link cable.		
PC	Check that the grabber board is installed and set up correctly.		

SPECIFICATIONS [Basic specification]

(1) Image sensor all-pixel-data-readout interline transfer CCD 1077(H) × 788(V) Total pixels

1034(H) × 779(V) Active pixel Video output pixels 1024(H) × 768(V) Scanning area 4.81 (H) × 3.62(V) mm (1/3" type) 4.65(H) ×4.65 (V) μm Unit cell size

(2) Scan method Non-interlace

(3) Synchronization method Internal synchronization (4) Aspect ratio 4.3

(5) Video Output Compliant with CameraLink standard version 1.2 Data 10 / 8 bit switching (factory default: 8bit)

1024(H) × 768(V) [29.99 fps] Readout mode All pixel readout (default): Partial Scan (representing value) 1024(H) × 384(V) [52.75 fps]

1024(H) × 192(V) [85.14 fps]

minimum video output lines: 192, minimum step: 1 line

(6) Sensitivity 400 lx, F5.6 (7) Minimum subject illuminance

4lx F1.4 (GAIN: 10dB, video level: 50 %) 0 to Approx. +12 dB [1step= Approx. 0.132dB] (8) Gain

(9) Setup Level (factory default) 40 LSB ±20LSB [10bit] 10 LSB ±5LSB [8bit] 0 to 255 LSB [10bit, 255 steps]

(user setup) 0 to 63 LSB [8bit, 255 steps]

(10) Gamma correction OFF ($\gamma = 1.0$ fixed)

DC12V \pm 10% (ripple 50mV_{P-P} or less) (11) Power supply voltage

(12) Power consumption Approx. 1.3W

[Electrical shutter specification] (1) Shutter Speed

8/1 to 1/20,000 [sec] Setting format: Nur

merator / Denominator [sec]

Positive/Negative switching (factory default: negative)

lens and camera, be sure to use the lens you actually

Numerator : 1 to 8 Denominator: 1 to 20,000

ON / OFF switching (factory default: OFF) (2) Random Trigger Shutter

Fixed mode The exposure time depends on the shutter speed setting Pulse width modeThe exposure time depends on the pulse width.

(3) Restart-Reset ON / OFF switching (factory default: OFF) The exposure time depends on the period of Ext. VD.

[Internal sync signal specification]

29.50 MHz (1 CLK) ±100ppm 23.22 kHz (1H = 1270CLK) (1) Driving frequency

(2) Horizontal sync frequency 29.99 Hz (maximun frequency on all pixel readout mode)

(3) Vertical sync frequency

Polarity

[Input signal specification] Camera Link interface input: CC1 (1) TRIG/VD

[Mechanical spec]

Pulse width Minimum: 2µs

(1) Lens mount

*Depending on the lens you use, the performance of the camera may not be brought out fully due to the deterioration in resolution and brightness in the peripheral area, occurrence of the ghost, aberration and others. When you check the combination between the

> Install a next lens; the C mount lens, its dimension of protrusion from flange is equal to or less than 7.9 mm. If a lens does not stand to this condition, it might not

be installed to this camera (2) Dimensions $29mm(W) \times 29mm(H) \times 26.5mm(D)$

* Not including protrusion Approx. 45g

(3) Mass (4) Camera body grounding: Conductive between circuit GND and camera body

[Operating ambient conditions]

Performance assurance Temperature: 0°C to +40°C

10% to 90% (no condensation) -5°C to +45°C Humidity:

(2) Operation guaranteed Temperature: Humidity: 90% or less (no condensation)

-20°C to +60°C (3) Storage Temperature:

95% or less (no condensation) Humidity:

(4) EMC conditions (Electro-Magnetic Compatibility)

EMI (Electro-Magnetic Interference): EN61000-6-4 EMS (Electro-Magnetic Susceptibility): EN61000-6-2

(5) FCC

(5) FCC FCC Part 15 Subpart B class A
*About the conformity of EMC standard of this machine, it has guaranteed in the conditions combined with our system condition. When used combined parts other than specification of our company, I ask you to have final EMC conformity checked of a visitor with a machine and the whole personnel. visitor with a machine and the whole equipment.

[Communication specification] 9600 bps (fixed) (1) Communication speed

(2) Start bit


(3) Data bit 8

None (4) Parity

(5) Stop bit (6) Handshake None


[Camera PSU input impedance]


 $Ci \le 57\mu F$, $Rx = 10k\Omega \pm 10\%$

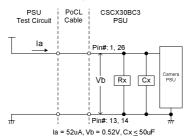

[Relative Spectrum Response]

*The lens characteristics and light source characteristics are not reflected in table.

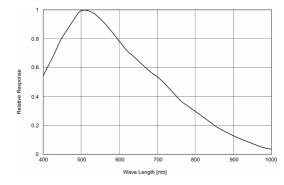

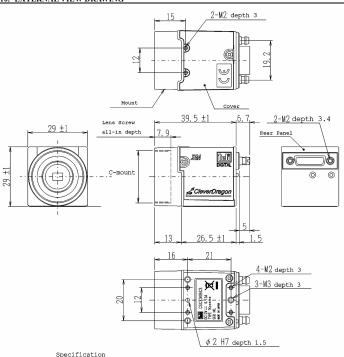

Cover Following information is only for EU-member states:

Cover

Processing Lens-mount, Rear panel

Material

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about the take-back and recycling of this product, please contact your supplier where you purchased the product.

Lens-mount, Rear panel : Aluminum die-cast

: Anticorrosion aluminum alloy

: Leather satin coating (Black)

: Cation coating (Black)



"This symbol is applicable for EU member states only"



中华人民共和国 环保使用期限

环保使用期限标识,是根据电子信息产品污染控制管理办法以及, 信息产品污染控制标识要求(SJ/T11364-2006)、电子信息产品环保使用 期限通则,制定的适用于中国境内销售的电子信息产品的标识。 电子信息产品只要按照安全及使用说明内容,正常使用情况下, 月期算起,在此期限内,产品中含有的有毒有害物质不致发生外泄或突变,不致对环境造成严重污染或对其人身、财产造成严重损害。

产品正常使用后,要废弃在环保使用年限内或者刚到年限的产品时,请 根据国家标准采取适当的方法进行处置。

另外,此期限不同于质量/功能的保证期限

The Mark and Information are applicable for People's Republic of China only.

<产品中有毒有害物质或元素的名称及含量>

	有毒有害物质或元素						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
相机本体	X	0	0	0	0	0	

- O:表示该有毒有害物质在该部件所有均质材料中的含量均在电子信息产品中有毒有害 物质的限量要求标准规定的限量要求(SJ/T11363-2006)以下
- \times : 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出电子信息产品中有 毒有害物质的限量要求标准规定的限量要求(SJ/T11363-2006)

This information is applicable for People's Republic of China only.

有关再利用的信息(包装物)

Information on recycling of wrapping composition



TOSHIBA TELI CORPORATION

Head Office: 7-1, 4 chome, Asahigaoka, Hino-shi, Tokyo, 191-0065, Japan (Overseas Sales Department)

Phone : +81-42-589-8771 FAX +81-42-589-8774

URL: http://www.toshiba-teli.co.jp

